

NEW İ20 (GB) 2015

AVN INSTALLATION MANUAL

In order to perform a completely sound installation, please follow the assembly and disassembly instructions given below.

- Ensure that your clothes are appropriate and clean before entering the vehicle and starting the installation process.
- Place the 2 protective mats in the vehicle.

Upon completing the instructions above, namely, "actions to be taken before entering the vehicle", you can proceed to the installation stage.

Please leave the AVN device on the backseat in its original box (without taking it out) and follow the steps below respectively.




AVN DEVICE AND ITS PARTS

AVN DEVICE AND ITS PARTS

- 1- AVN DVD
- 2- DAIICHI FRAME
- 3- GPS ANTENNA
- 4- TOUCH SCREEN STYLUS
- 5- PROTECTIVE 3M TAPE
- 6- PARKING BRAKE CABLE
- 7- 4 GB DAIICHI MAP SD CARD
- 8- DEVICE OPERATING MANUAL
- 9- MAP OPERATING MANUAL

DISASSEMBLY

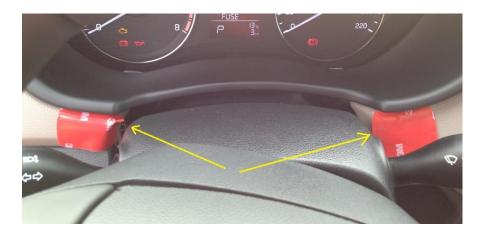

BEFORE STARTING THE DISASSEMBLY PROCESS, APPLY THE 3M PROTECTIVE TAPE, WHICH COMES IN THE BOX, ONTO THE LOWER RIGHT AND LEFT-HAND SIDE CORNERS AS SHOWN IN THE FIGURE IN ORDER NOT TO HARM THE LEATHER COVER WHILE REMOVING THE




CAREFULLY REMOVE THE TABS OF THE ORIGINAL INDICATOR FROM THE HOUSINGS WHERE THEY ARE ATTACHED.



TILT THE UPPER EDGE OF THE FRAME FORWARD ATTENTIVELY.




START TO SEPARATE THE VENTILATION FRAME EDGES FROM THE TABS CAREFULLY.

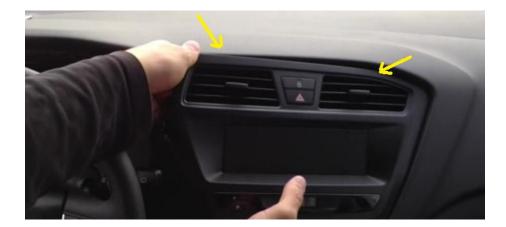

PULL THE VENTILATION FRAME FORWARD SLOWLY AND REMOVE IT.



REMOVE BY PULLING AND WITHOUT DAMAGING THE SOCKET CONNECTORS AT THE BACK OF THE VENTILATION FRAME.

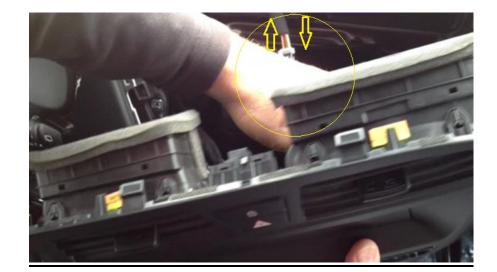

REMOVE THE SOCKET CONNECTORS LOCATED AT THE BACK SLOWLY AND WITHOUT DAMAGING.



THE SOCKETS HAVE BEEN REMOVED FROM THE FRAME, HOUSING IS FREE.



SECURE THE FRAME.

PREPARATION FOR ASSEMBLY




SEPARATE THE VENTILATION GRID LOCATED ON THE FRAME YOU HAVE REMOVED FROM THE CONNECTING



REMOVE THE VENTILATION GRIDS FROM THE FRAME.



UNSCREW THE FLASHER IN THE FRAME WITH THE HELP OF A SCREWDRIVER.

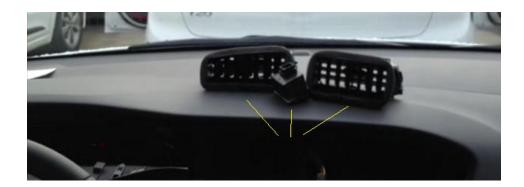

PLACE THE 2 GRIDS AND THE FLASHER THAT HAVE COME OUT OF THE FRAME ONTO THE GLOVE COMPARTMENT.



TAKE THE DAIICHI FRAME OUT OF ITS BOX AND FIX THE FLASHER IN ITS PLACE.



MOUNT THE GRIDS INTO THE DAIICHI FRAME.



THE DAIICHI FRAME IS READY FOR ASSEMBLY.


PRIOR TO MOUNTING THE DAIICHI DVD MULTIMEDIA SYSTEM, YOU MUST PASS THE BRAKE CABLE, WHICH IS UNDER THE PARKING BRAKE, TO THE RADIO HOUSING WITH THE HELP OF A PIPE.



HOLD THE VEHICLE'S PARKING BRAKE CABLE WHICH YOU HAVE BROUGHT TO THE BACK OF THE RADIO HOUSING AND THE YELLOW CABLE WHICH HAS COME OUT OF THE DAIICHI BOX AND IS SHOWN WITH <u>NUMBER 6</u> IN THE FIRST FIGURE. INTEGRATE THIS CABLE WITH THE PARKING BRAKE CABLE OF THE VEHICLE.



HOLD THE DAIICHI DVD MULTIMEDIA DEVICE AND FIX THE GPS ANTENNA ONTO THE DEVICE USING THE ADHESIVE TAPE AT THE BACK.

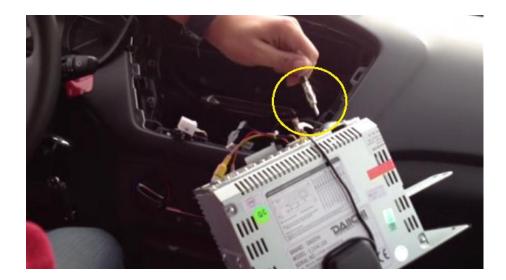

CAUTIOUSLY MOUNT THE SOCKETS, WHICH ARE ON THE VEHICLE SIDE, ONTO THE BACK SIDE OF THE MULTIMEDIA DEVICE.



PLACE THE MULTIMEDIA DEVICE IN ITS HOUSING ON THE VEHICLE SIDE CAREFULLY.



BRING THE MULTIMEDIA DEVICE INTO ALIGNMENT WITH THE SCREW HOLES ON THE VEHICLE SIDE.



CHECK ALL FUNCTIONS OF THE DEVICE BY RUNNING THEM.

IF THERE IS NO PROBLEM, SCREW THE DEVICE INTO ITS HOUSING.






SEAT THE DAIICHI FRAME INTO ITS PLACE CAREFULLY.




COMPLETE THE CHECKING PROCESS BY CHECKING THE EDGES OF THE FRAME WITH YOUR FINGERS. MAKE SURE THAT IT IS SEATED.



SEAT THE EDGES OF THE CLUSTER FRAME INTO THEIR PLACE CAREFULLY.

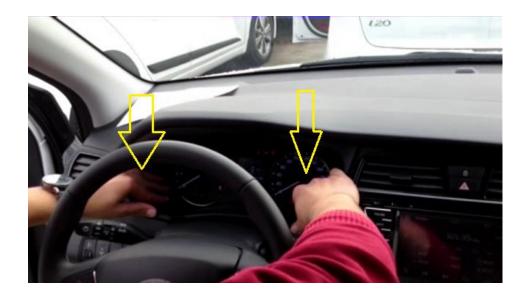

MAKE SURE THAT THEY ARE FULLY SEATED BY CHECKING WITH YOUR FINGERS.

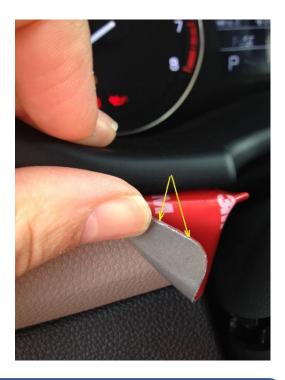

ONCE THE ASSEMBLY PROCESS IS COMPLETE, REMOVE THE 2 PIECES OF 3M PROTECTIVE TAPE THAT YOU HAVE APPLIED BEFORE.



ASSEMBLY COMPLETE.

Before leaving the vehicle, check the inner sides of the vehicle and take all your tools, implements, dashboard protective cover and the mats if you have used them.

Then perform the final cleaning, leave the vehicle, deliver the vehicle to the person who is in charge and have the delivery record signed.

